



## **Quick Reference Notes – PRINT ENVELOPE**

### **簡易操作 – 信封打印**

# CONTENTS

## 目錄

1	Set Envelope Size 設置信封大小.....	1
1.1	On Application 應用程式上設定.....	1
1.2	On Printer Properties 列印內容上設定.....	4
2	Set Paper Attributes 設置紙張選項.....	7

For more online support information please visit  
更多相關資料，請訪問以下網址：  
<https://support-fb.fujifilm.com>

# 1 SET ENVELOPE SIZE 設置信封大小


## 1.1 ON APPLICATION 應用程式上設定

In this note, Microsoft 365 (Word) is used as the example. Settings vary from application to application.

本操作說明書以 Microsoft 365 (Word) 示範，其他應用程式的設定會有差異。


Make sure the correct printer has been selected before the subsequent settings.

在設定之前，請確認選擇好所需印表機。

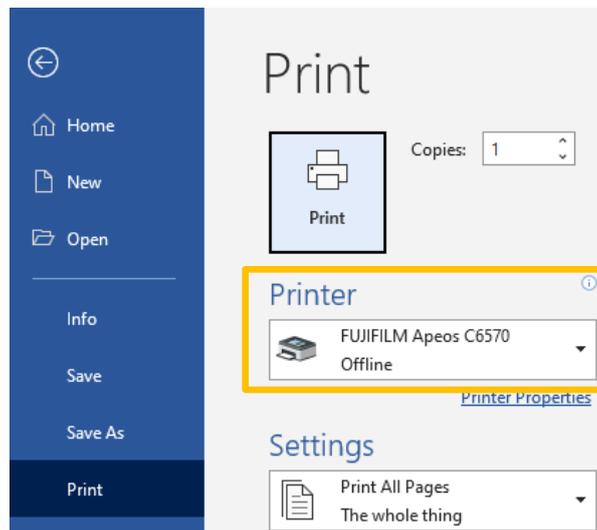


1. Click [Layout] in the toolbar.

1. 按功能區內 [版面配置]。

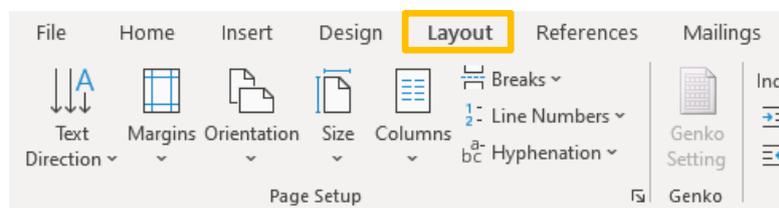

2. Click [Orientation], then select [Landscape].

2. 選擇 [方向] 內 [橫向]。


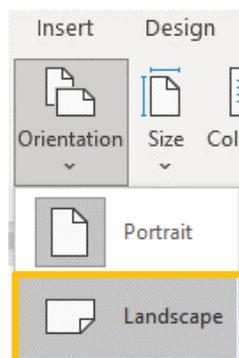


3. Select envelope size under [Size]. Click [OK] to save. Settings of Section 1.1 completed.

If the size can not be found, click [More Paper Sizes]. Go to Step 4.


3. 選擇 [大小] 內所需信封尺寸，然後按 [確定] 儲存。至此完成 1.1 部設定。

如果找不到所需尺寸，按 [更多紙張尺寸]，然後到步驟 4。

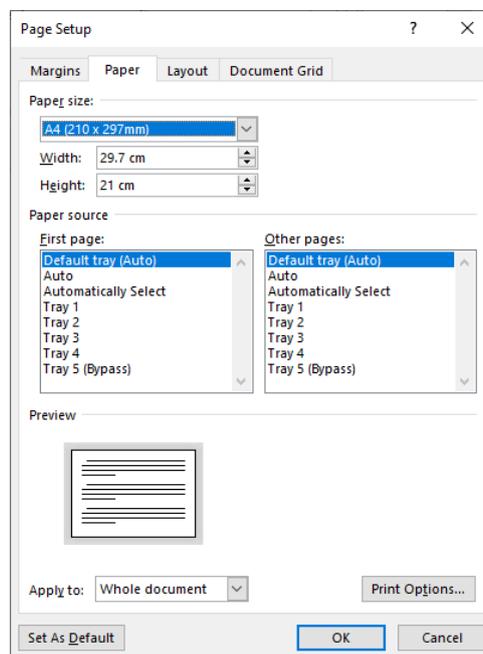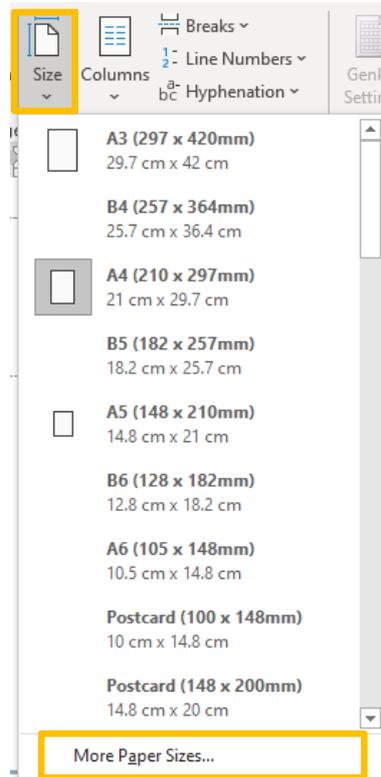


4. Click [Custom size] under “Paper Size”.

4. 在「紙張尺寸」下，按 [自訂尺寸]。

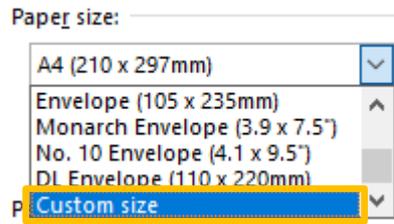

5. Enter the envelope size.


5. 輸入信封尺寸。

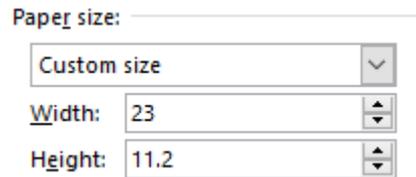

## 1.2 ON PRINTER PROPERTIES 列印內容上設定


1. Click [Printer Properties].

1. 按【內容】。

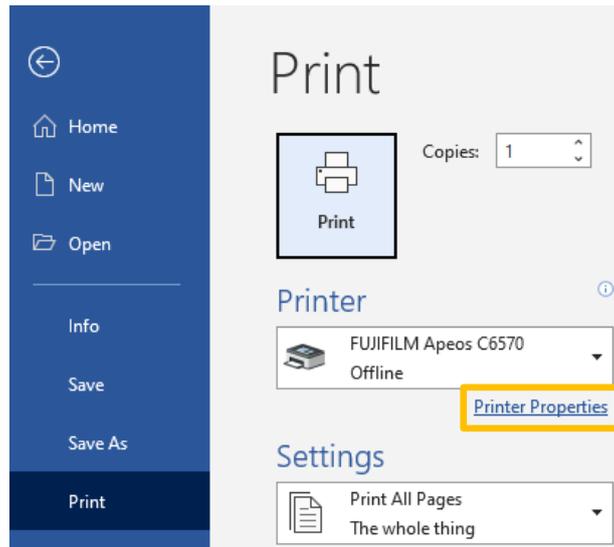


2. Select the envelope size under "Paper Size".

2. 在「紙張尺寸」選擇所需信封尺寸。

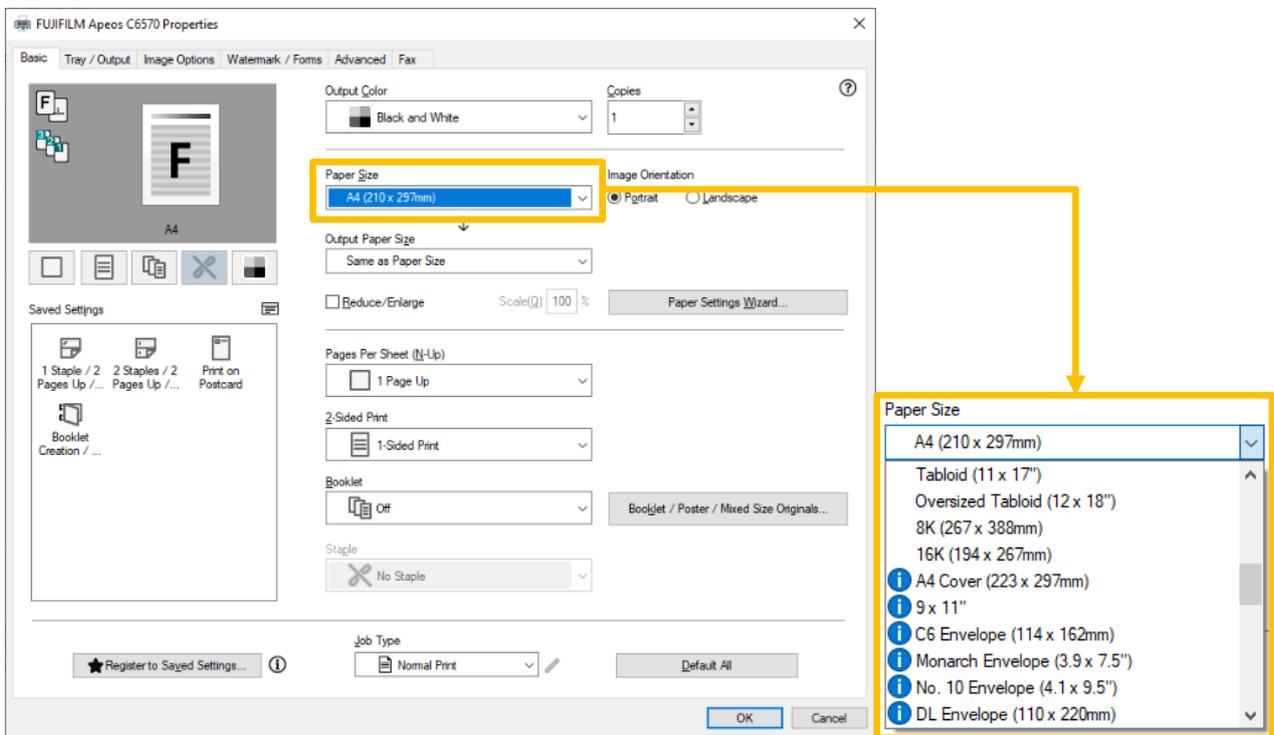

3. If no right size is available, scroll down and click [Custom].

3. 找不到所需尺寸，就拉到最底，按 [自定義尺寸]。

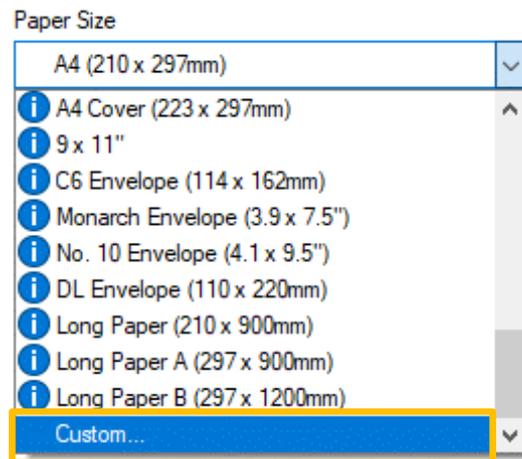

4. Set all of the followings -
  - a. Select [Create a New Form].
  - b. Enter the name.
  - c. Select [Side Opening Envelope] or [End Opening Envelope].<sup>Note</sup>
  - d. Enter Width (the shorter side) and Length (the longer side).
  - e. Click [Save], then [OK].

Note:

- Side Opening Envelope refers to text direction on envelope as *Figure A* shows.
- End Opening Envelope refers to text direction on envelope as *Figure B* shows.

4. 設定以下所有項目：


- a. 選擇 [新登記]。
- b. 輸入名稱。
- c. 選擇 [西式信封] 或 [中式信封]<sup>註</sup>。
- d. 輸入闊度 (即信封短邊) 及長度 (即信封長邊)。
- e. 按 [儲存]，然後按 [確定]。

註:

- 西式信封以 *Figure A* 所示打印地址。
- 中式信封以 *Figure B* 所示打印地址。



*Figure A*

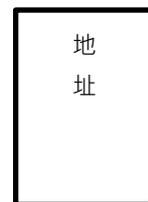

*Figure B*


## 2 SET PAPER ATTRIBUTES 設置紙張選項

The following settings should be configured automatically if all steps of Section 1.2 have been done. For precaution, make sure they are correct before submitting the job.

完成 1.2 部所有步驟，以下設定應已自動做好。惟在打印前，不妨確認清楚。


1. On [Printer Properties], click [Tray / Output] tab. Select [Tray 5 (Bypass)] under “Paper Tray”.

1. 在 [內容] 內，選擇 [紙盤 / 輸出] 分頁，然後在「紙盤」下，選擇 [手送紙盤]。

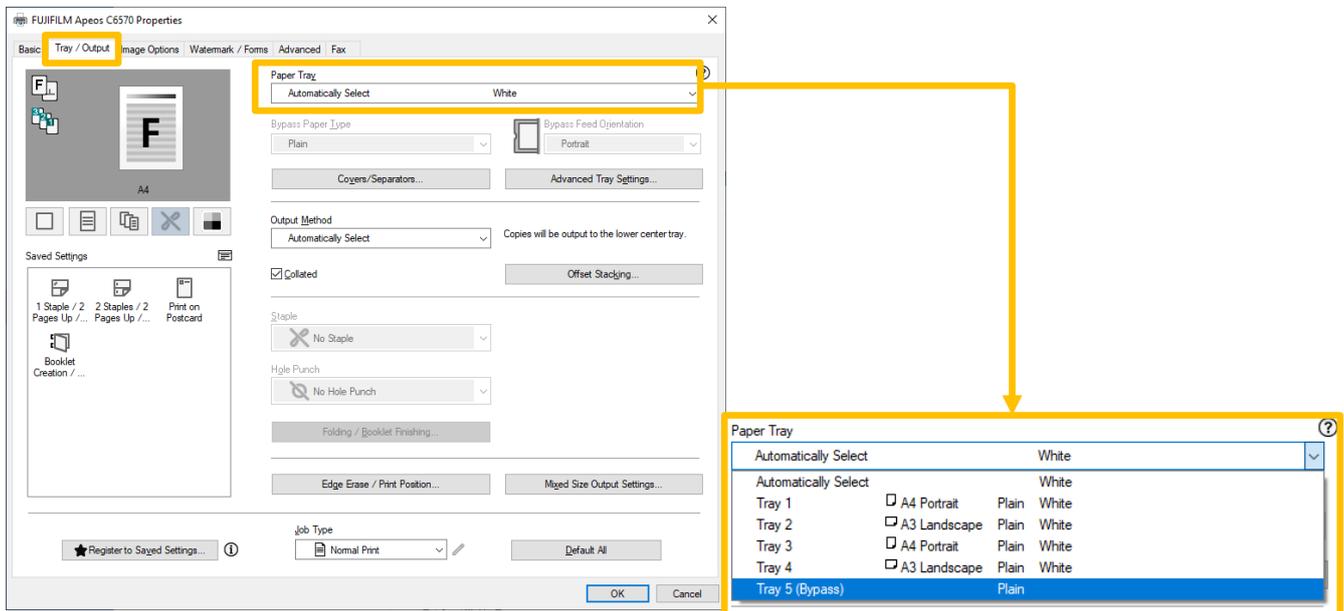

2. Select [Envelope] under “Bypass Paper Type”. Document is ready to print.

2. 在「手送紙質」下，選擇 [信封]。到此可打印文件。

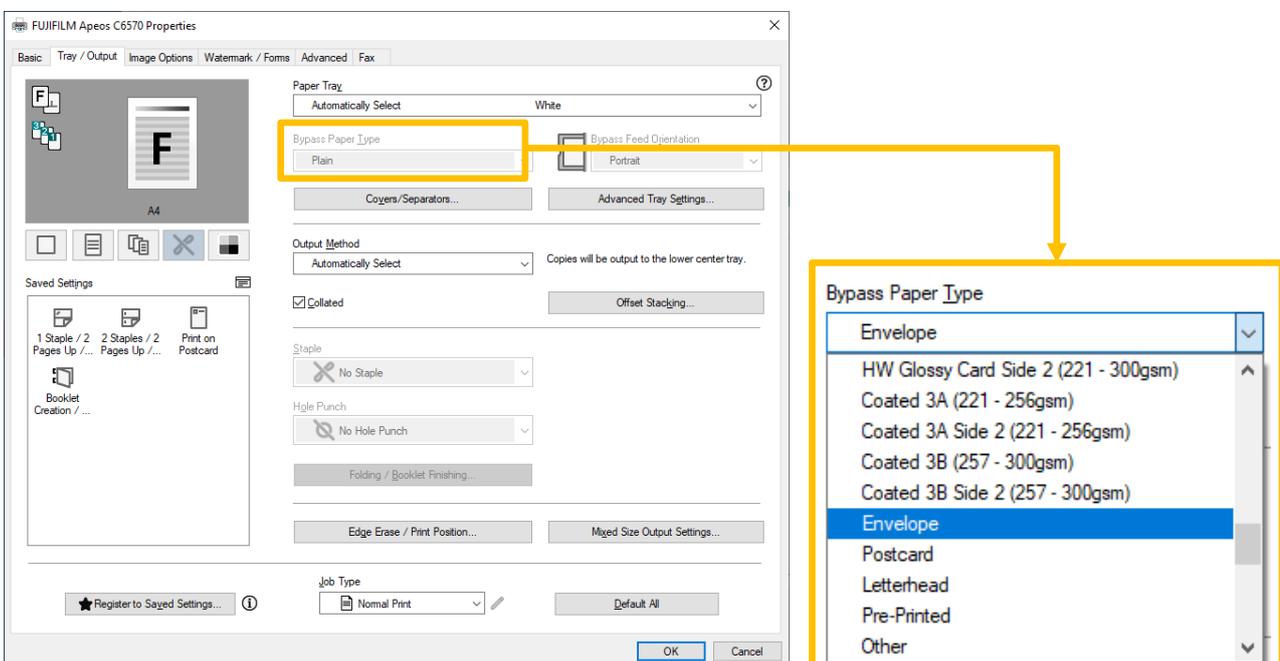

# Customer Support Center

## 2513-2513

FUJIFILM and FUJIFILM logo are registered trademarks or trademarks of FUJIFILM Corporation.

Apeos, ApeosPro, ApeosWiz, Working Folder is registered trademarks or trademarks of FUJIFILM Business Innovation Corp.

Adobe, Adobe logo, PostScript and PostScript logo are either registered trademarks or trademarks of Adobe in the United States and/or other countries.

Apple, AirPrint and Mac are trademarks of Apple Inc. registered in the U.S. and other countries.